


Tooth Preparation / Reduction in millimeters

Anterior Veneers

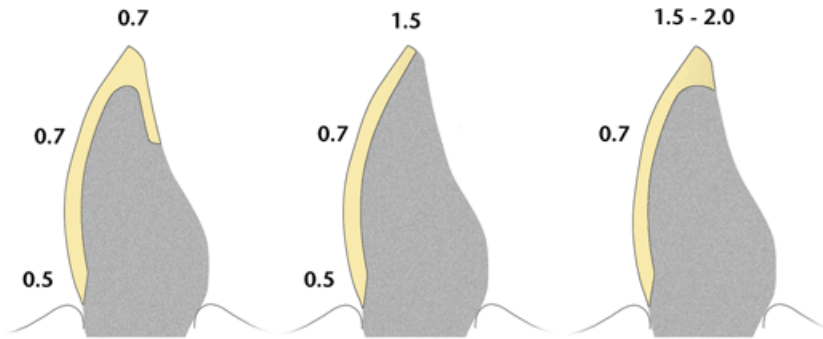


Inlays / Onlays



Crowns

Prepare 1.5 mm shoulder margins of 90-110° angle.

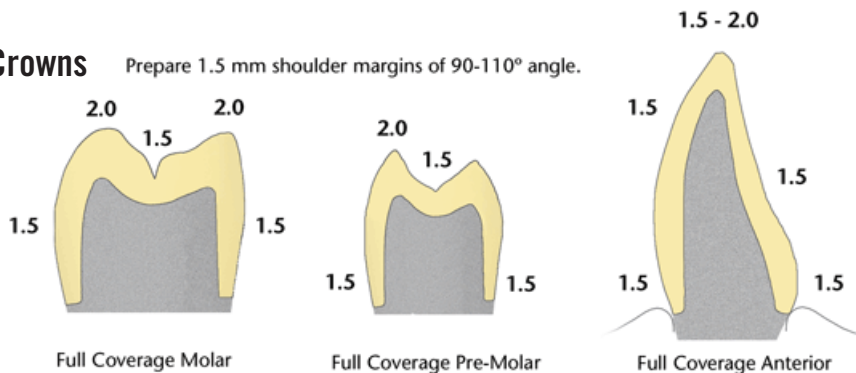

- If veneers for anterior teeth are required, the preparation can be very conservative with minimal loss of tooth structure.
- First the dentist prepares the enamel layer that shall be covered by the veneer.
- For choosing the right color, the patient is advised by the dentist and/or the dental technician, so the laboratory can produce the veneers accordingly.
- On delivery to the patient, the restorations are chemically bonded to the tooth structure
- Although very little tooth material is eliminated, this method is absolutely strong and durable.
- Cementation All known bonding-luting systems can be used, with a terminal expansion of $\leq 1\%$.

